




**S.Z5277.IPI BLOWER KIT  
for Clarity CL2118 IPI (Intermittent Pilot Ignition)  
(S.CL2118.IPI)**

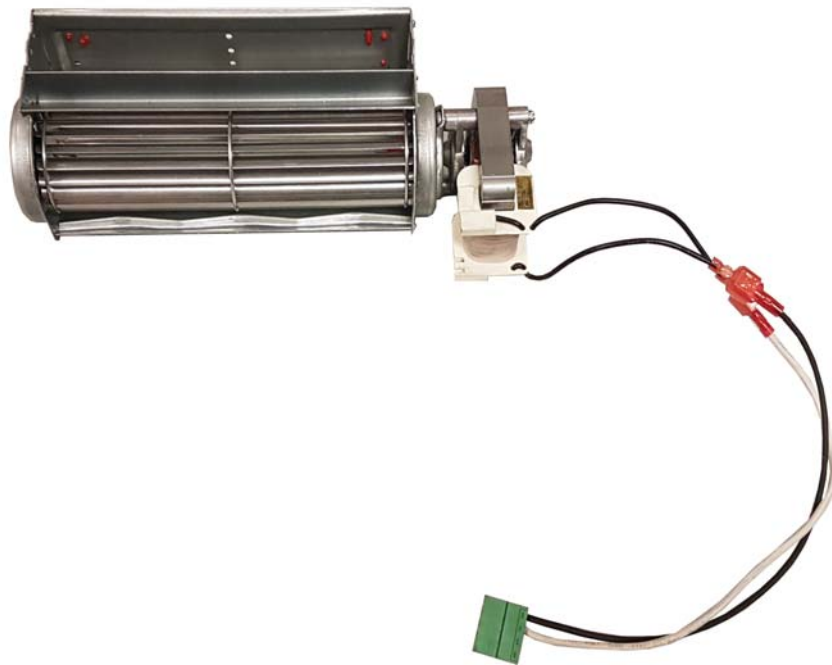

The optional blower kit can be controlled with the wall mounted transmitter. The blower speed can be adjusted through six (6) speeds. To control the blower press the MODE key on the wall mount transmitter to index to the blower control icon. Use UP/DOWN arrow keys to turn on, off , or adjust the blower speed. A single beep from the IFC control will confirm the command has been received.


**NOTE: ENSURE THE APPLIANCE IS TURNED OFF AND AT ROOM TEMPERATURE BEFORE INSTALLATION.**

**Manufactured By**


**Valley Comfort Systems Inc.**, 1290 Commercial Way, Penticton, BC, V2A 3H5, Canada  
Phone: 250-493-7444 ♦ Fax: 250-493-5833 ♦ [www.blazeking.com](http://www.blazeking.com) ♦ [info@blazeking.com](mailto:info@blazeking.com)

## OPTIONAL S.Z5277.IPI BLOWER CONNECTION

1. If attached, lift face frame and safety screen up and out, away from the appliance, and set it aside.
2. Slide label plates out and set to the side.

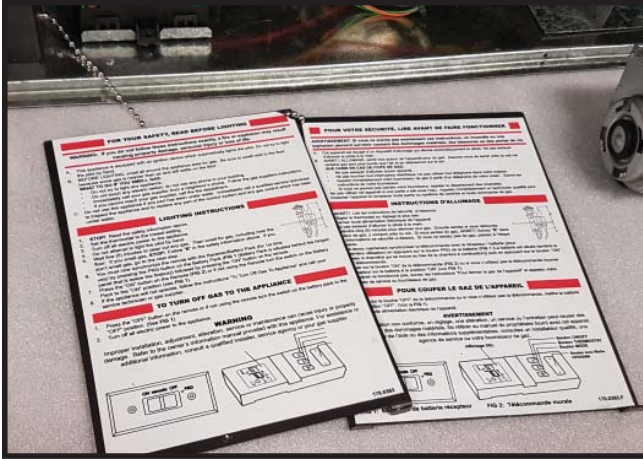

3. Remove the IFC control box from the velcro and bring to front right hand side of the appliance.

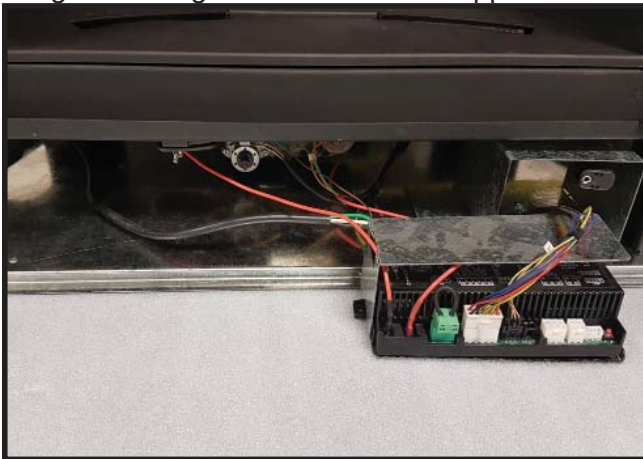


4. Slide blower through left-hand side to the back of appliance. Slide wires beneath the valve. Ensure wires do not get pinched or hooked anywhere.



5. Slide the blower along the back wall until it reaches the stop flange, then feed the blower wires underneath the gas supply to the front as shown.



6. Plug green blower connector into the IFC control box.

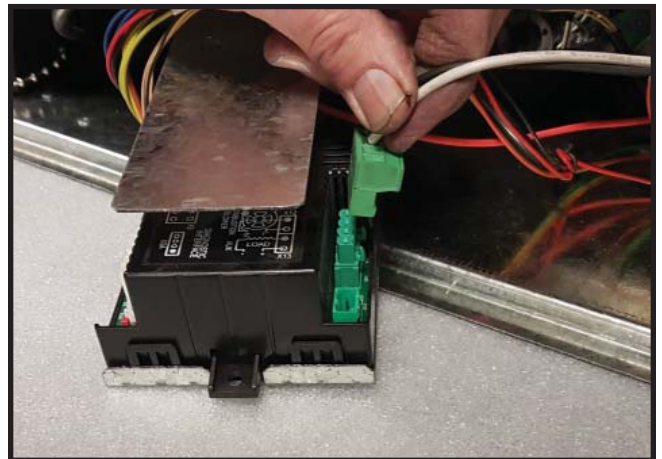

7. Re-install the IFC control box onto velcro.  
**NOTE: ENSURE ALL WIRES ARE CLEAR OF BLOWER BLADES.**
8. Slide label plates back between the IFC control and battery holder.
9. Re-hang safety screen and face frame if applicable.

